


# PERI Rental Criteria

## Steel Walers

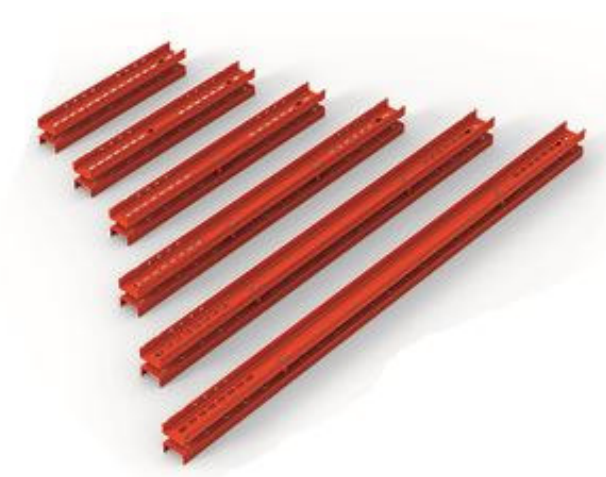

**Contact**

**PERI GmbH**  
**Formwork Scaffolding**  
**Engineering**

P.O. Box 1264  
 89264 Weißenhorn; Germany  
 Phone +49 (0) 7309.950-0  
 Fax +49 (0) 7309.951-0  
 rental-criteria@peri.de

Content	Page
Steel Walers SRU   SRZ   KRZ  VSRZ	2
Glossary	9


Changes made	Date   Initial	Page
New Version	08/2016   fw	
05.04 Care number added	05/2018   fw	6
Reference to work instruction added	03/2020   fw	5

# PERI Rental Criteria


## Steel Walers



Steel Waler Universal SRU	No.	Name	Article number
---------------------------	-----	------	----------------

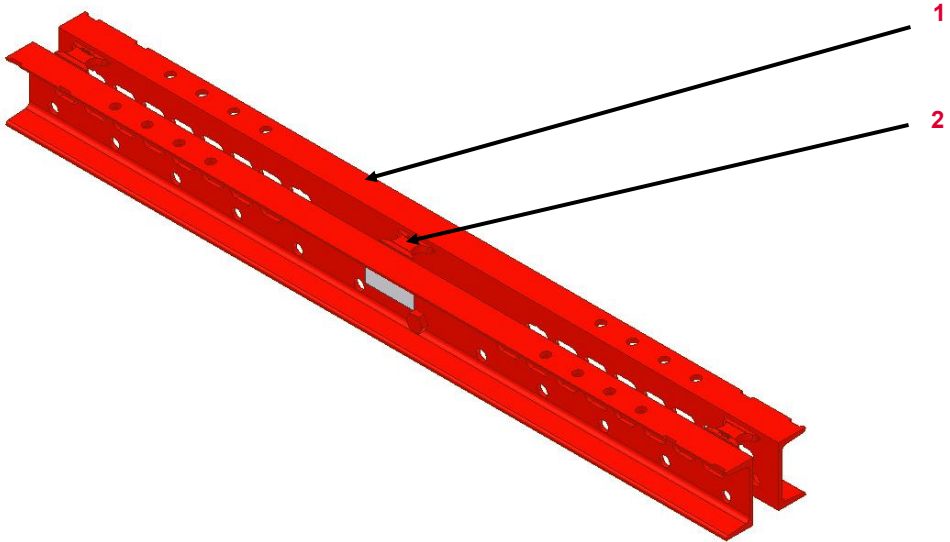

1	Profile	
2	Spacer piece SRU	103815
3	Distance	108768
4	Hex. Bolt M 20 x 90	710226
5	Nut M 20	781053

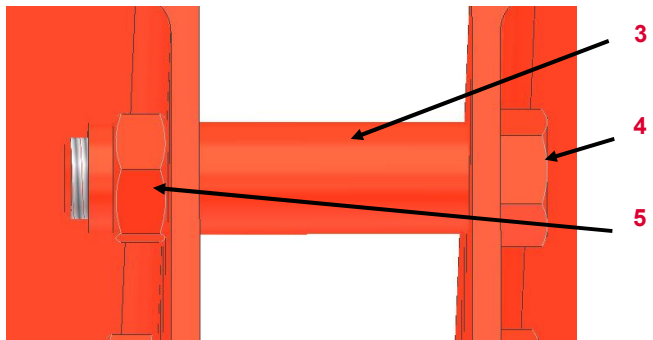


# PERI Rental Criteria

## Steel Walers



Steel Waler SRZ	No.	Name	Article number
-----------------	-----	------	----------------

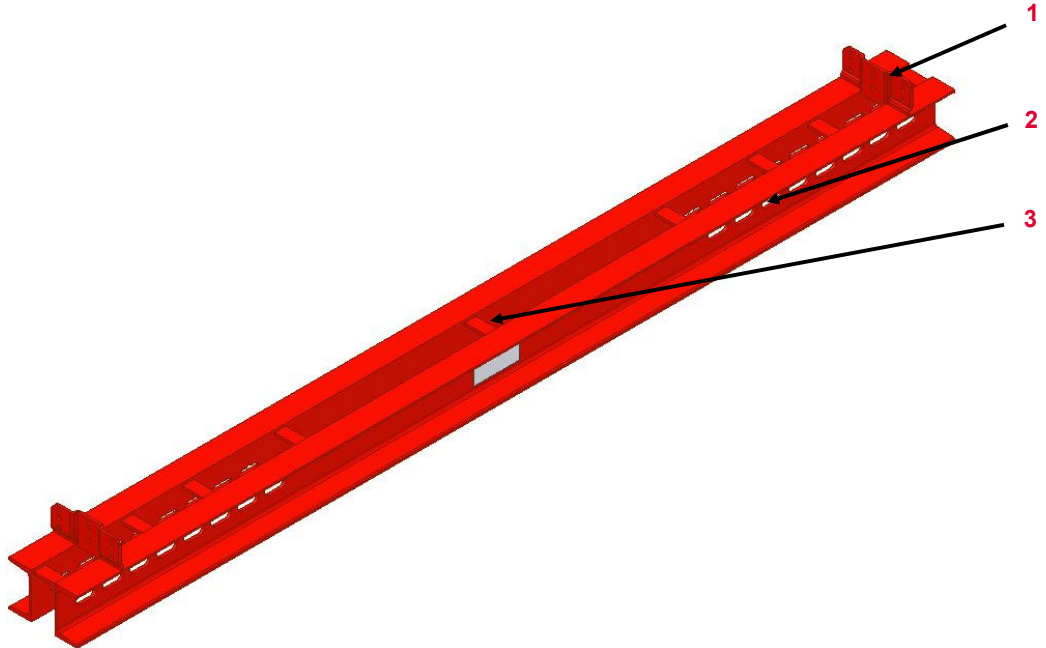

1	End plate SRZ	710001
2	Profile	
3	Web plate SRZ	701521

# PERI Rental Criteria

## Steel Walers



Article	Article number
Steel Waler Universal SRU U 120, L= 0,72 m	103868
Steel Waler Universal SRU U 120, L= 0,97 m	103871
Steel Waler Universal SRU U 120, L= 1,22 m	103874
Steel Waler Universal SRU U 120, L= 1,47 m	103877
Steel Waler Universal SRU U 120, L= 1,72 m	103886
Steel Waler Universal SRU U 120, L= 1,97 m	103889
Steel Waler Universal SRU U 120, L= 2,22 m	103898
Steel Waler Universal SRU U 120, L= 2,47 m	103892
Steel Waler Universal SRU U 120, L= 2,72 m	103929
Steel Waler Universal SRU U 120, L= 2,97 m	103903
Steel Waler Universal SRU U 120, L= 3,47 m	103906
Steel Waler Universal SRU U 120, L= 3,97 m	103915
Steel Waler Universal SRU U 120, L= 4,47 m	103918
Steel Waler Universal SRU U 120, L= 4,97 m	103922

Article	Article number
Steel Waler Universal SRU U 120, L= 5,47 m	103925
Steel Waler Universal SRU U 120, L= 5,97 m	103928
Steel Waler SRZ U 100, L= 0,95 m	010600
Steel Waler SRZ U 100, L= 1,20 m	010030
Steel Waler SRZ U 100, L= 1,45 m	010610
Steel Waler SRZ U 100, L= 1,825 m	010060
Steel Waler SRZ U 100, L= 1,95 m	010070
Steel Waler SRZ U 100, L= 2,45 m	010050
Steel Waler SRZ U 100, L= 2,95 m	010120
VARIO Waler VSRZ-24 L= 120/12	010440
VARIO Waler VSRZ-24 L= 245/12	010420
Corner Waler IRZ 75/75	010200

# PERI Rental Criteria

## Steel Walers



Steel Waler SRU SRZ	Description	Instruction	Billing Condition	Type
---------------------	-------------	-------------	-------------------	------



Spacer piece or web missing | cut in



WI\_05\_12\_SRU\_Space\_Piece\_1408\_en



088823 (SRU)  
088824 (SRZ)



Distance between the profiles out of tolerance

■ If possible



088244


















■ Or if not possible



# PERI Rental Criteria

## Steel Walers






Steel Waler SRU SRZ	Description	Instruction	Billing Condition	Type
	<p><b>Shortened</b></p>			
	<p><b>Cut in</b></p> <ul style="list-style-type: none"> <li>■ <math>t \leq 16 \text{ mm}</math></li> <li>■ Or <math>t &gt; 16 \text{ mm}</math></li> </ul>	<p>Weld</p>  	<p>089198</p>  	 
	<p><b>Drill holes</b></p> <ul style="list-style-type: none"> <li>■ <math>&gt; \text{Ø } 16 \text{ mm}</math></li> </ul>			

# PERI Rental Criteria

## Steel Walers



Steel Waler SRU SRZ	Description	Instruction	Billing Condition	Type
	<p><b>Grinded profile end</b></p> <ul style="list-style-type: none"> <li>■ If original length is given</li> <li>■ Or if not given</li> </ul>	<p>✓</p> <p>🗑️ 🚫</p>	<p>📏</p> <p>📏</p>	<p>👁️</p> <p>⚙️</p>
	<p><b>Profile end bent</b></p>	<p>🔨</p>	<p>📏 088244</p>	<p>👁️</p>
	<p><b>Dent in profile</b></p> <ul style="list-style-type: none"> <li>■ If possible</li> <li>■ Or if not possible</li> </ul>	<p>🔨</p> <p>🗑️ 🚫</p>	<p>📏 088244</p> <p>📏</p>	<p>⚙️</p> <p>⚙️</p>


# PERI Rental Criteria

## Steel Walers



Steel waler SRU SRZ	Description	Instruction	Billing Condition	Type
---------------------	-------------	-------------	-------------------	------

**Strong side**  
Weight from top

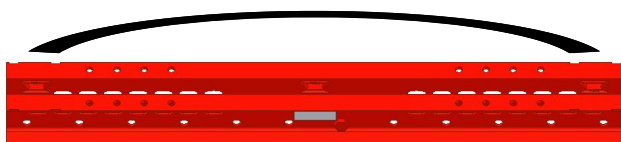

### Bent


■ ≤ permitted bent



■ Or > permitted bent



**Weak side**  
Weight from the side




















Article	Perm. Bent strong	Perm. Bent weak
SRU 72 - 97	2,5 mm	4,0 mm
SRU 122- 247	3,0 mm	5,0 mm
SRU 272- 397	4,0 mm	6,0 mm
SRU 447- 597	4,0 mm	7,0 mm
SRZ 0,95	2,5 mm	4,0 mm
SRZ 1,20 - 2,45	3,0 mm	5,0 mm
SRZ 295	4,0 mm	6,0 mm

# PERI Rental Criteria

## Glossary Icons



Icon	Significance	Icon	Significance	Icon	Significance
	Not OK – material is scrap		Billing necessary (customer)		Optical damage
	OK—material stays in rental park		No Billing necessary		Functional damage
	Scrap material—it's not permitted to hand out the material because of safety aspects		Shorten material		Functional damage—it's not permitted to hand out the material
	Repair according to Instruction		Mark material		Static damage—it's not permitted to hand out the material
	Fix material cold– Afterwards check weld seams and bordering components		Replace damaged material		
	Repair after local economic efficiency calculation		Replace missing material		
	Clean material				